Two-Threaded Positions Depth Base
 Connector (installed on indicator)
 Digital Indicator (item# 35-128)

4. Depth Rods: 1,2,3,4,5,6"

(flat, needle, ball, spline)
6. Full set with protective case

5. Measuring points:

**Please read through this instruction carefully before using the tool. Use the tool for its intended purpose only.

Item# 400-D69: 0-22" Digital Depth Indicator Set



Specifications

Indicator range: 0-1"/25mm Depth gauge range: 0-22" Indicator resolution: 0.0005" / 0.01mm / 1/128th

Indicator accuracy: ±0.001"/0.03mm Indicator repeatability: 0.0005"/0.01mm Indicator power: 3V, CR2032 Battery

Indicator battery life: 1/2~ 1 year under normal operation

Operations

Indicator: Please refer to iGAGING digital indicator 35-128 instruction on indicator usage.

Zero setting: 1. Secure the indictor on base with flat or ball points (without any rod attachment); press down the indicator against a flat surface and make sure base is tightly against the surface; press the ZERO key on the indicator to set zero. Rods can be added to the indicator after zero setting.

2. For using needle and spline tips: since the contacts will extend from the base, please use a setting master for a relative zero setting.

Depth base: 2-position base for easy position exchange.

Connector: screw and un-screw to change position of the indicator on the base.

Depth rods: 1" to 6" rods can add up to 22" in range. Measuring contacts: Ball, Flat, Needle, & Spline.

Zero setting with ball contact and without extension on a flat surface



Zero setting when using extension rod and/or flat, needle, or spline point and with a pair of block, and on a flat surface.



Parts:





Do not disassemble the instrument.

Do not subject the instrument to blows or shock.

Do not store the instrument under direct sun light.

Avoid exposing unit to strong magnetic fields and live voltage.

Use soft cloth to clean instrument before and after usage. Never use organic solvents such as acetone or benzene to clean.



