

**Please read through this instruction carefully before using the tool. Use the tool for its intended purpose only.

Item# 400-D68 : 0-22" Depth Indicator Set



Parts:

1. Two-Threaded Positions Depth Base
2. Connector (installed on indicator)
3. Dial Indicator (item# 400-005)
4. Bezel Locking Screw
5. Depth Rods: 1,2,3,4,5,6"
6. Measuring points:
(flat, needle, ball, spline)
7. Full set with protective case

• Specifications

Indicator range: 0-1" Depth gauge range: 0-22"
 Indicator resolution: 0.0005"
 Indicator accuracy: ± 0.0005 "
 Indicator repeatability: 0.0005"
 Indicator tolerance: ± 0.001 "

• Operations

Zero setting: 1. Loosen the indicator bezel lock.

Secure the indicator on base with flat or ball points (without any rod attachment); push down the indicator against a flat surface and make sure base is tightly against the surface; adjust the dial on the indicator to the "0" position and tighten the screw.

2. For using needle and spline points: zero setting the indicator using an setting master.

Depth base: 2-position base for easy position exchange.

Connector: screw and un-screw to change position of the indicator on the base.

Depth rods: 1" to 6" rods can add up to 22" in range.

Measuring tips: 4 different measuring tips to use in different applications.

Zero setting with ball contact and without extension on a flat surface



Zero setting when using extension rod and/or flat, needle, or spline point and with a pair of block, and on a flat surface.



Smart phone scan

- Do not disassemble the instrument.
- Do not subject the instrument to blows or shock.
- Do not store the instrument under direct sun light.
- Avoid exposing unit to strong magnetic fields and live voltage.
- Use soft cloth to clean instrument before and after usage. Never use organic solvents such as acetone or benzene to clean.

WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov